



MODEL NO 43 (12 volts)
MODEL NO 44 (24-32 volts)

OPERATING INSTRUCTIONS

1. This switch has 2 "ON" positions:
 - "AUTO" allows all 3 wire computerized pumps and pumps with float switches to operate automatically.
 - "MAN" will activate the pump to run as long as the rocker switch is depressed. The rocker switch automatically returns from "MAN" to "OFF" when released which prevents the pump from being accidentally left on. This is Rule's famous FAIL-SAFE feature.
2. The red light indicates that power is being supplied to the pump and that the pump should be operating.

INSTALLATION INSTRUCTIONS



1. Install the Deluxe Switch in a 2 3/4" X 2 3/4" hole in bulkhead or dashboard.
2. Attach the front panel of the switch to the bulkhead or dashboard with 4 black screws provided.

3. Wire the switch as shown below. The positive (+) lead from the battery should go directly to the fuse.
4. Crimp the 3 connectors provided onto the ends of the wires as shown below. Strip wire ends 1/4" prior to crimping on terminals. Refer to your pump instructions to determine proper wire size. If the installation requires that the switch be greater than 20 feet from the battery source, increase the wire size by one gauge (i.e. 16 ga. to 14 ga. and 14 ga. to 12 ga.). Push the connectors onto the terminals as shown.
5. This unit is not supplied with a fuse. The proper fuse size must be determined as indicated in the instructions for or on the body of your pump.
6. For fuse insertion or removal, push and turn to release using a dime or screwdriver.
7. Failure to properly fuse your system is a dangerous practice and will void the warranty on any Rule pump.

3 WIRE COMPUTER PUMP

WIRING DIAGRAMS

PUMP and FLOAT SWITCH

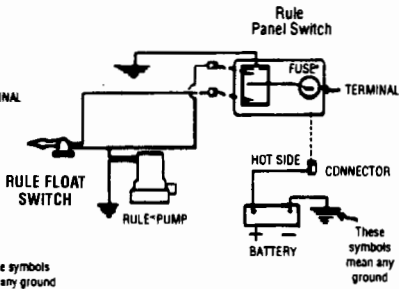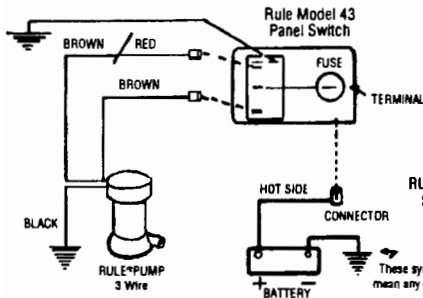

THIS PRODUCT SHOULD BE FUSED WITH THE RECOMMENDED FUSE SIZE FOR THE RULE PUMP TO WHICH IT IS CONNECTED.

rule industries

Cape Ann Industrial Park, Gloucester, MA 01930

©RULE REGISTERED TRADEMARK
 M-1564 11/99



ITT Industries
Engineered for life